



1: Swap Smart Lock Long Handles

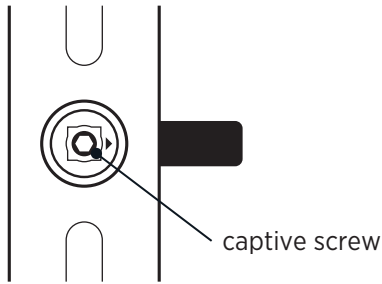

Using an allen key, remove captive screw from inside and remove the factory fitted long handle. Install small handles using new screws supplied, new screws have fresh thread lock included.


(IMPORTANT, Make sure the direction arrow points in the correct direction as per SL36 instructions.)

 2: Measure and Cut Door




Measure and cut rebate into door, install supplied mortise lock as per instructions. Install SL36 smart lock as per instruction manual.

3. Measure and install adjustable striker plate.

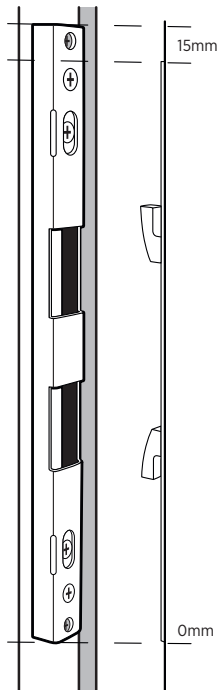

Measure and install adjustable striker as per supplied diagram. The base of the striker should align to the base of the lock face once installed.

4. Adjust striker.

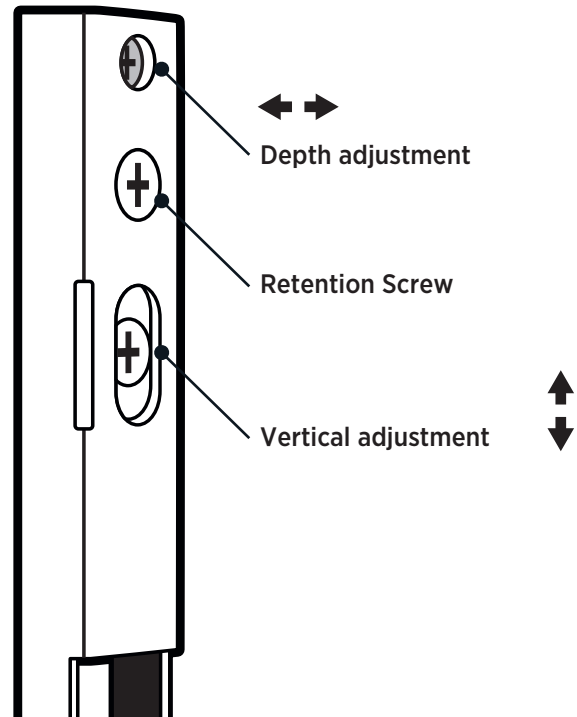

Adjust the striker to secure the door using the adjustment screws, the adjustments can be up and down by loosening the vertical adjustment screws and the depth by loosening the retention screw and turning the depth adjustment screw.

5. Operation

- SL36 Smart Lock functions as per instruction manual.
- From the outside, use Keypad, Thumbprint, Bluetooth or Tag to unlock and pull lever down to unlock.
- From inside, pull lever down to unlock and pull door to slide.
- To lock, lift lever up to lock door from the inside or outside.

