SYL726HANDING02

SYL726HANDING02




726 MORTICE LOCK HANDING REVERSAL




CHECK HANDING

Determine if handing direction is correct for the door Installation. If reversal is needed follow these steps to reverse handing direction.

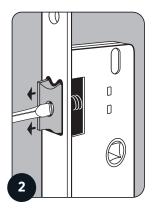


RELEASE LATCH

Loosen screw clockwise in the front of the lock body located in line with the latch, this will extend the latch past the lock face,

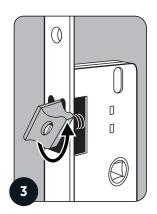

REVERSE LATCH

With the latch protruding past the lock face, turn the latch 180 degrees and reseat the latch into the lock face.

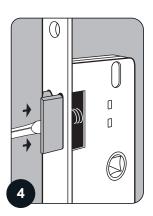

SECURE LATCH

Tighten screw anti clockwise in the front of the lock body this will push the latch back into to the lock body securing the latch.



726 MORTICE LOCK HANDING REVERSAL



CHECK HANDING

Determine if handing direction is correct for the door Installation. If reversal is needed follow these steps to reverse handing direction.



RELEASE LATCH

Loosen screw clockwise in the front of the lock body located in line with the latch, this will extend the latch past the lock face,



REVERSE LATCH

With the latch protruding past the lock face, turn the latch 180 degrees and reseat the latch into the lock face.




SECURE LATCH

Tighten screw anti clockwise in the front of the lock body this will push the latch back into to the lock body securing the latch.



726 MORTICE LOCK HANDING REVERSAL

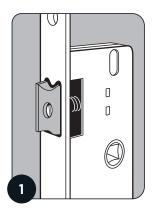

CHECK HANDING

Determine if handing direction is correct for the door Installation. If reversal is needed follow these steps to reverse handing direction.



RELEASE LATCH

Loosen screw clockwise in the front of the lock body located in line with the latch, this will extend the latch past the lock face,



REVERSE LATCH

With the latch protruding past the lock face, turn the latch 180 degrees and reseat the latch into the lock face.



SECURE LATCH

Tighten screw anti clockwise in the front of the lock body this will push the latch back into to the lock body securing the latch.

anding Rever