Centro Latch Set


Lever Furniture

Installation Instructions

1 Mark and drill door.


Using template, mark

- Centre of door edge
- 6mm holes x2
- 2mm hole x2
- 20mm hole through door.

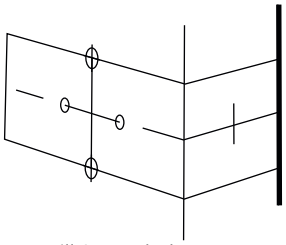


- Drill 25mm hole square to door edge, 100mm deep
- Drill 20mm hole through door face from both sides
- Drill 2x 6mm holes through door face from both sides
- Drill 2x 2mm holes through door face from both sides

2 Check forend of latch and fit latch

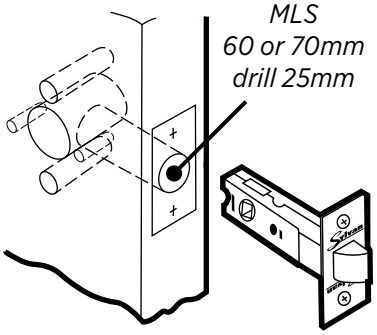


3 Fit spindle through latch

Offset hole at the bottom, Allow equal length of spindle on either side of door

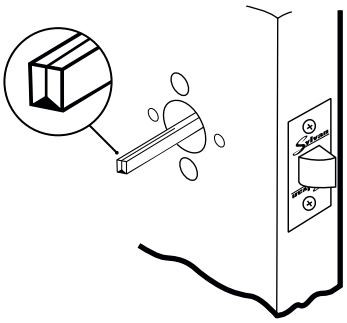


4 IMPORTANT STEP

Using sharp side cutters, cut bolts to required length to accept the nuts from the other side of the door.

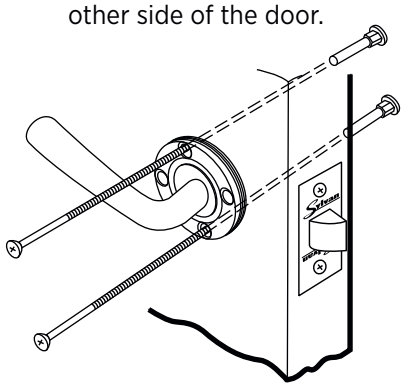


Fit through bolt fixing screws

5 Drill and fit 2 wood screws for alignment only

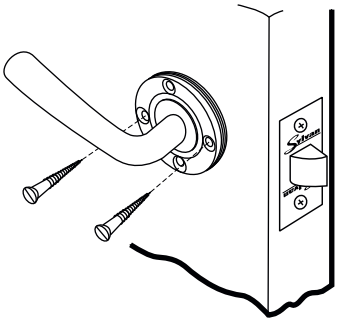

6 Fit cover plates over handles

Tighten up grub screws onto the spindle using allen key provided

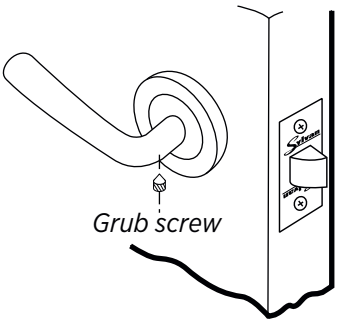

Installation Template

