
Installation for E61DT Dummy Trim


Lever Furniture

Installation Instructions

1 **Mark and drill door.**
Start approx 990mm from the floor, fold and apply the supplied template and mark 2 centre points at your desired backset of 60mm or 70mm. Using a 2.5mm drill bit, drill to a depth of 5mm using the marked holes.

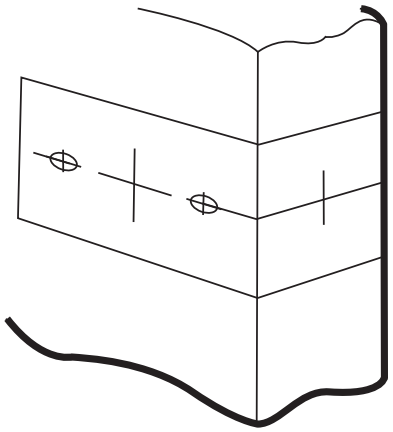

2 **Install the base.**
Align the knob/base to the pre-drilled holes. Using the 2x supplied screws, align and install the chassis onto the door. Using a screwdriver on a slight angle to clear the knob.

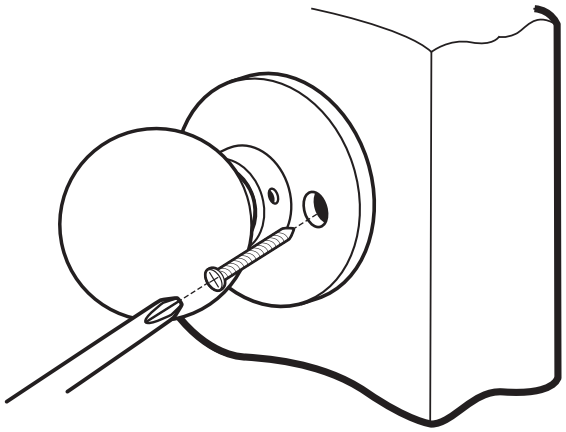

With this fixed dummy set we recommend using our MC1 Magnet, visit our website for further information.

Installation Template

