



Please Note!

This night latch is designed to suit either left or right hand opening doors. Please fasten all screws by hand and not an electric screw driver or drill, as over tightening is not recommended.

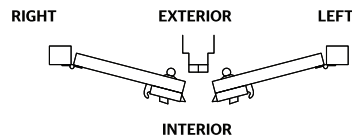

TOOLS REQUIRED:

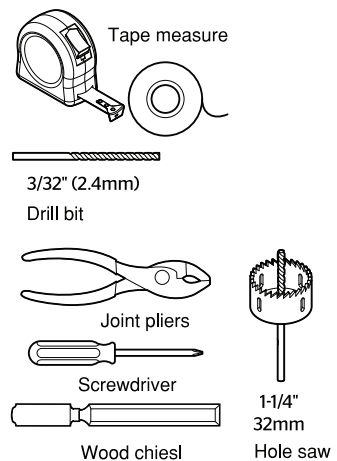

Installation Instructions

1. HOLE MARKINGS

- Mark the screw holes, centre, and points using a pencil, nail or other sharp object.

2. DRILLING

- Bore a hole 32mm in diameter for cylinder.
- Drill screw holes approximately 2cm deep.

3. AFFIXING THE EXTERIOR CYLINDER

- Insert cylinder with cylinder guard through hole in front door. Please verify that the spindle protrudes 5 to 8mm from the back of the door.
- Insert screws through the holes of the holding plate and fasten to cylinder. Using machine screws, fasten holding plate to door.

4. LOCK INSTALLATION

- For wooden doors, align the lock with the holes. Mark the outline of the lock plate and chisel out 1.5 to 2mm to accommodate the lock plate.
- Using the lock key, move and lock to "open" position. Insert the cylinder torque blade into the rear lock opening.
- Position the lock horizontally and fasten lock to door with screws.

5. ATTACHING THE STRIKE

- Place the strike against the doorframe to the side of the lock. Make sure lock and strike align. Mark the outline and chisel out 1.5 to 2mm depth to accommodate the strike.
- Fasten strike to doorframe with screws.

MAINTENANCE

Keep the cylinder lock clean. If key lock requires lubricating do not use oil (graphite powder is recommended). To maintain the latch remove and apply a small amount of grease to prolong use.

