

1 Add clear case




Align the hole in the case with the smartlock lever handle and slide over until it sits flush with the door with the drain hole at the base.

2 Tape in place




Using a non-marking or painters masking tape, tape the case to the door around 3 sides to secure to the door, leaving the base exposed.

3 Add handle sleeve

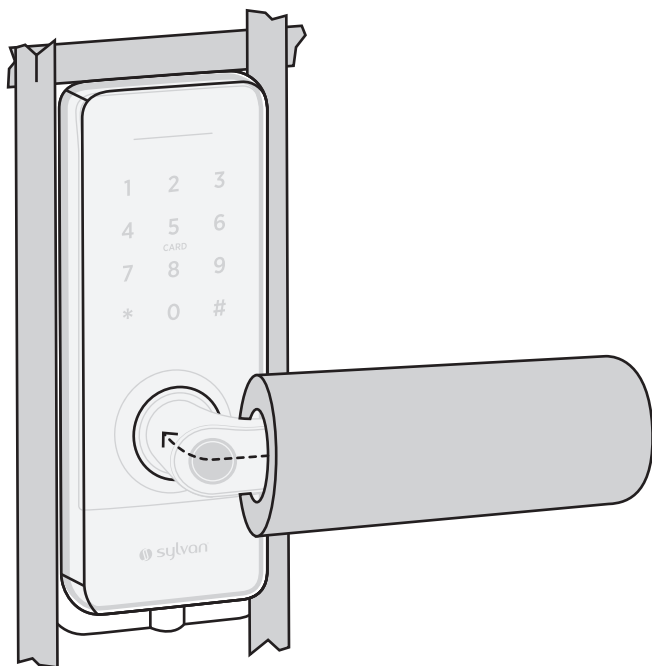

Slide the sleeve over the lever handle completely until it butts up against the clear case, creating a good seal.

4 Secure in place

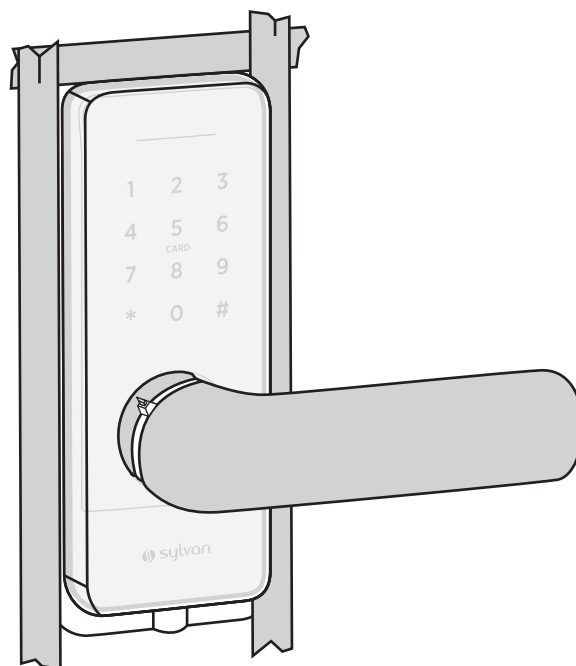

Using the supplied cable tie, firmly secure the sleeve onto the lever handle.