Centro Privacy Set

Lever Furniture

Installation Instructions

1 Mark and drill door.

Using template, mark
- Centre of door edge
- 6mm holes x 2
- 20mm hole through door.

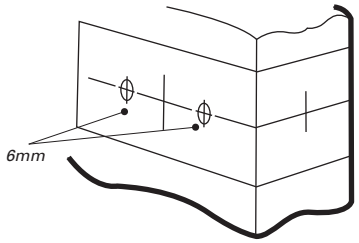

- Drill 25mm hole square to door edge, 100mm deep
- Drill 20mm hole through door face from both sides
- Drill 2x 6mm holes through door face from both sides

2 Check forend of latch and fit latch.

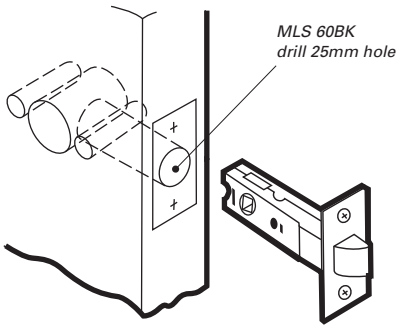

3 Decide on handing of latch.

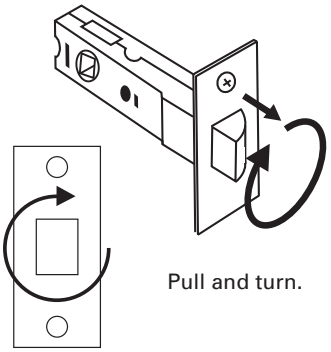

Pull and turn.

4 Fit spindle through latch.

Grooved face downwards.
Slide spindle in from outside face of door until spindle comes to a solid stop inside latch.
Note: O-ring groove on inside.

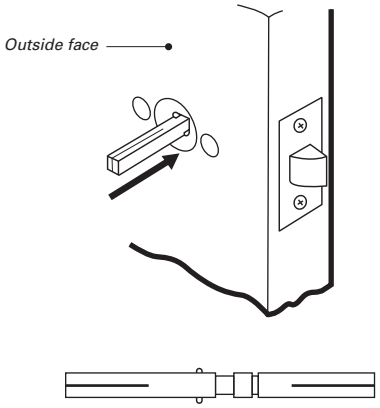

5 Fit rubber O-ring into slot mid way down spindle.

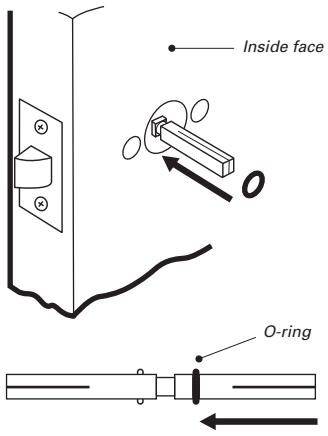

Note: From inside face.

6 Check O-ring is seating correctly in spindle.

Check to make sure spindle cannot slide out. O-ring should hold spindle in firmly.

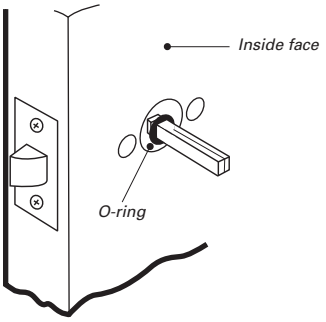

7 IMPORTANT STEP.

Fit through bolt fixing screw.

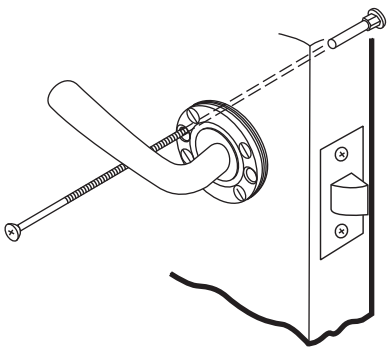

8 Fit both handles onto spindle.

Fit 4x wood screws each side.

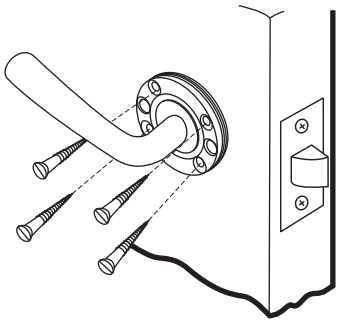

9 Fit cover plates over handles.

Tighten up grub screws onto the spindle using allen key provided.

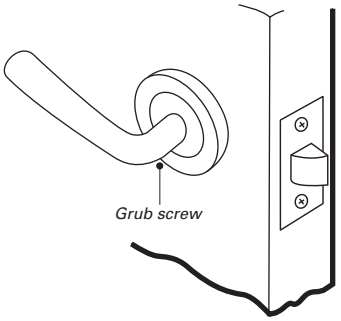

GDRutter Limited P: +64 9 444 5359 F: +64 9 444 3972 sales@gdrutter.co.nz

Installation Instructions continued

10 **Fit bathroom snib to inside handle.**

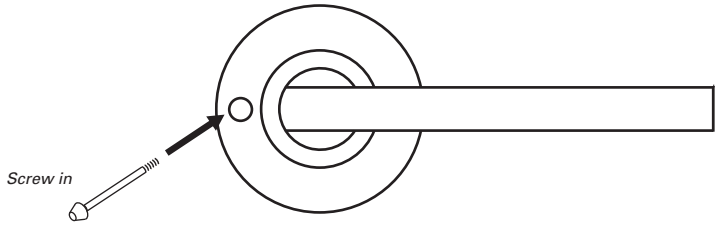

11 **Check action while door is open.**

- Push snib button, check outside is locked.
- Pull on inside handle. It should pop off button.
- If ok, check operation with door closed.
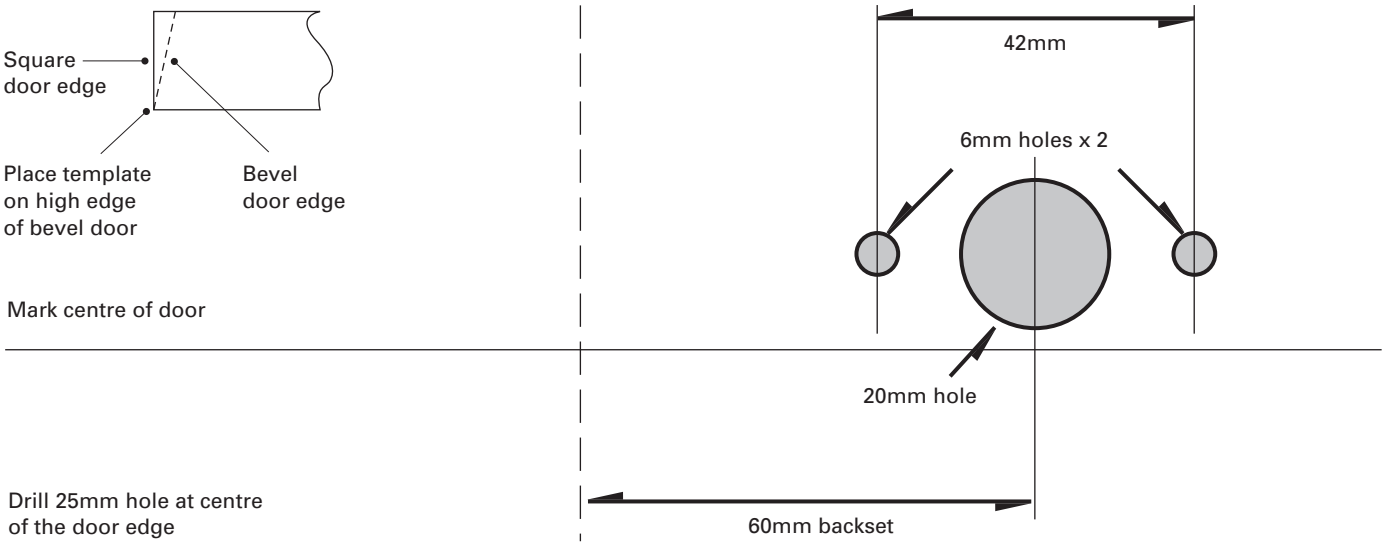
Installation Template