



Cavity Sliding Flush Pull Privacy Kit


Installation Instructions

1

- Fold template where indicated.
- Position template on door edge at desired latch height.
- Firmly hold template and mark latch height and escutcheon hole centre at required backset (60mm).
- Measure door thickness and mark centre.
- Drill 25mm (1") latch hole.


Note: It is important to drill this hole squarely.

- At required backset (60mm) drill pilot hole – suggested size 3mm (1/8").
- Enlarge hole to 54mm (2 1/8") as required, drilling from both sides of the door to prevent any break out from either side of the door when drilling.

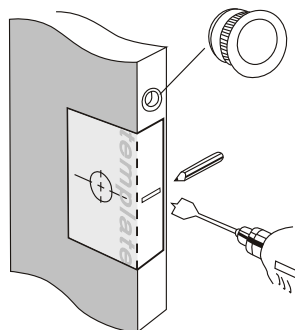


2

- Mark and chisel latch faceplate (8) to a recess of 4mm. Use latch faceplate as a template.
- Insert latch into door ensuring hook is facing upwards.
- Fasten with two screws (10) provided.

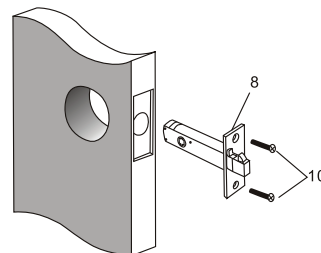


3

- Assemble the external escutcheon with posts for screws to the door (1).
- Assemble the internal escutcheon with screw holes to the door.
- Fasten escutcheons with screws provided (7).
- Check the latch moves freely – readjust escutcheons if required.

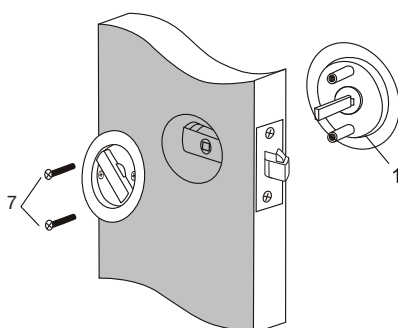


4

- Place the strike plate (12) on end of extended latch (14) and close door so the strike plate touches the jamb.
- Keeping the strike plate aperture evenly spaced around the latch, use the strike plate as a template to mark a cut-out on the jamb.
- Chisel the strike plate recess to a depth of 1.6mm.

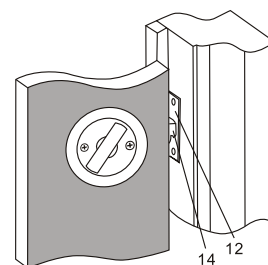

5

- Using the template provided, drill two 19mm (3/4") diameter holes 15mm (5/8") deep to recess the latchbolt.
- Fit and fasten the strike plate (12) with screws provided (13).

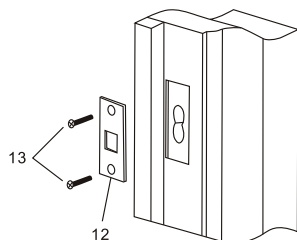


6

Problems after fitting

- A If the latch won't enter the strike plate, reposition strike plate on jamb.
- B If the door gap is too big, recess the strike plate deeper into the jamb.

Installation template for Sliding Cavity Door Lock

Strike Plate Recess in Door Jamb

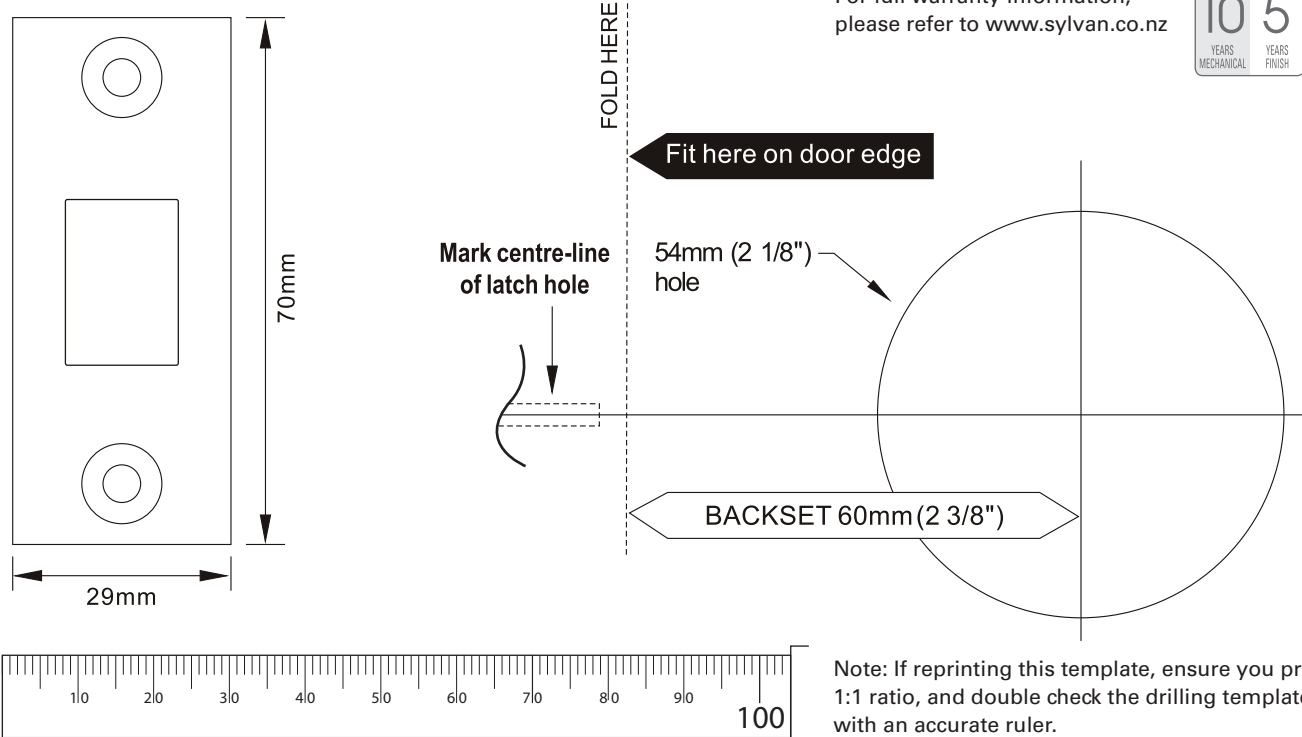

For full warranty information, please refer to www.sylvan.co.nz



Drilling Template



Cavity Sliding Flush Pull Privacy Kit

Installation Instructions

